


Stick the roof on to the top before sticking edges 5-7. Put holes in roof and thread string, then stick 5-7!

Stick to back panel once box made with overlap hanging down

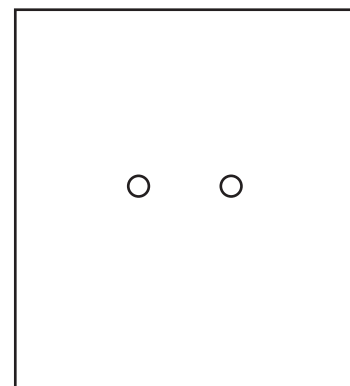

Roof

BAT